

convulsion **CN-2**

The Audible Disease Convulsion CN-2 is a vicious high-gain distortion unit that pushes your sound into the realm of complete insanity. With a twist of the **NOISE knob**, you can blend pure white noise with your input signal for extra **psychotic** enjoyment. If that isn't enough **craziness** for you, this monster also has the ability to **decimate** the sound even further with the **SPIT knob**. By tweaking this knob, your sound will start to cough, spit and sputter on the verge of **auditory death**. The **COUGH knob** rips up the sound even more by **oscillating** the signal. When a low-level signal is fed into the CN-2, the thing can self-produce **bubbling regurgitations** on it's own -- plus you can blend in the white noise to make a **crazed** white noise generator




NOISE knob – mixes white noise with the input signal

COUGH knob – adjusts the amount of oscillation

SPIT knob – adjusts sound decimating

VOLUME knob – adjusts the audio level of the final output

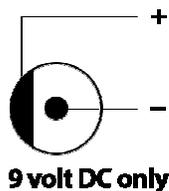

The Convulsion CN-2 is powered with a standard adapter with a "barrel" type tip (9 volts DC negative center pin) or with a 9-volt battery. We recommend the **Visual Sound 1 SPOT** power adapter (available through NoiseFX). If the battery should cease to function, simply remove the 4 screws on the bottom of the unit, remove the base and replace the battery with a fresh one. Unplug the cord from the input jack when not in use for longer battery life.

Contact us at disease@audibledisease.com
if you ever have problems with your
Convulsion CN-2. We'll fix it up!

audible disease
san francisco USA